
au by KDDI

Sportio English Simple Manual

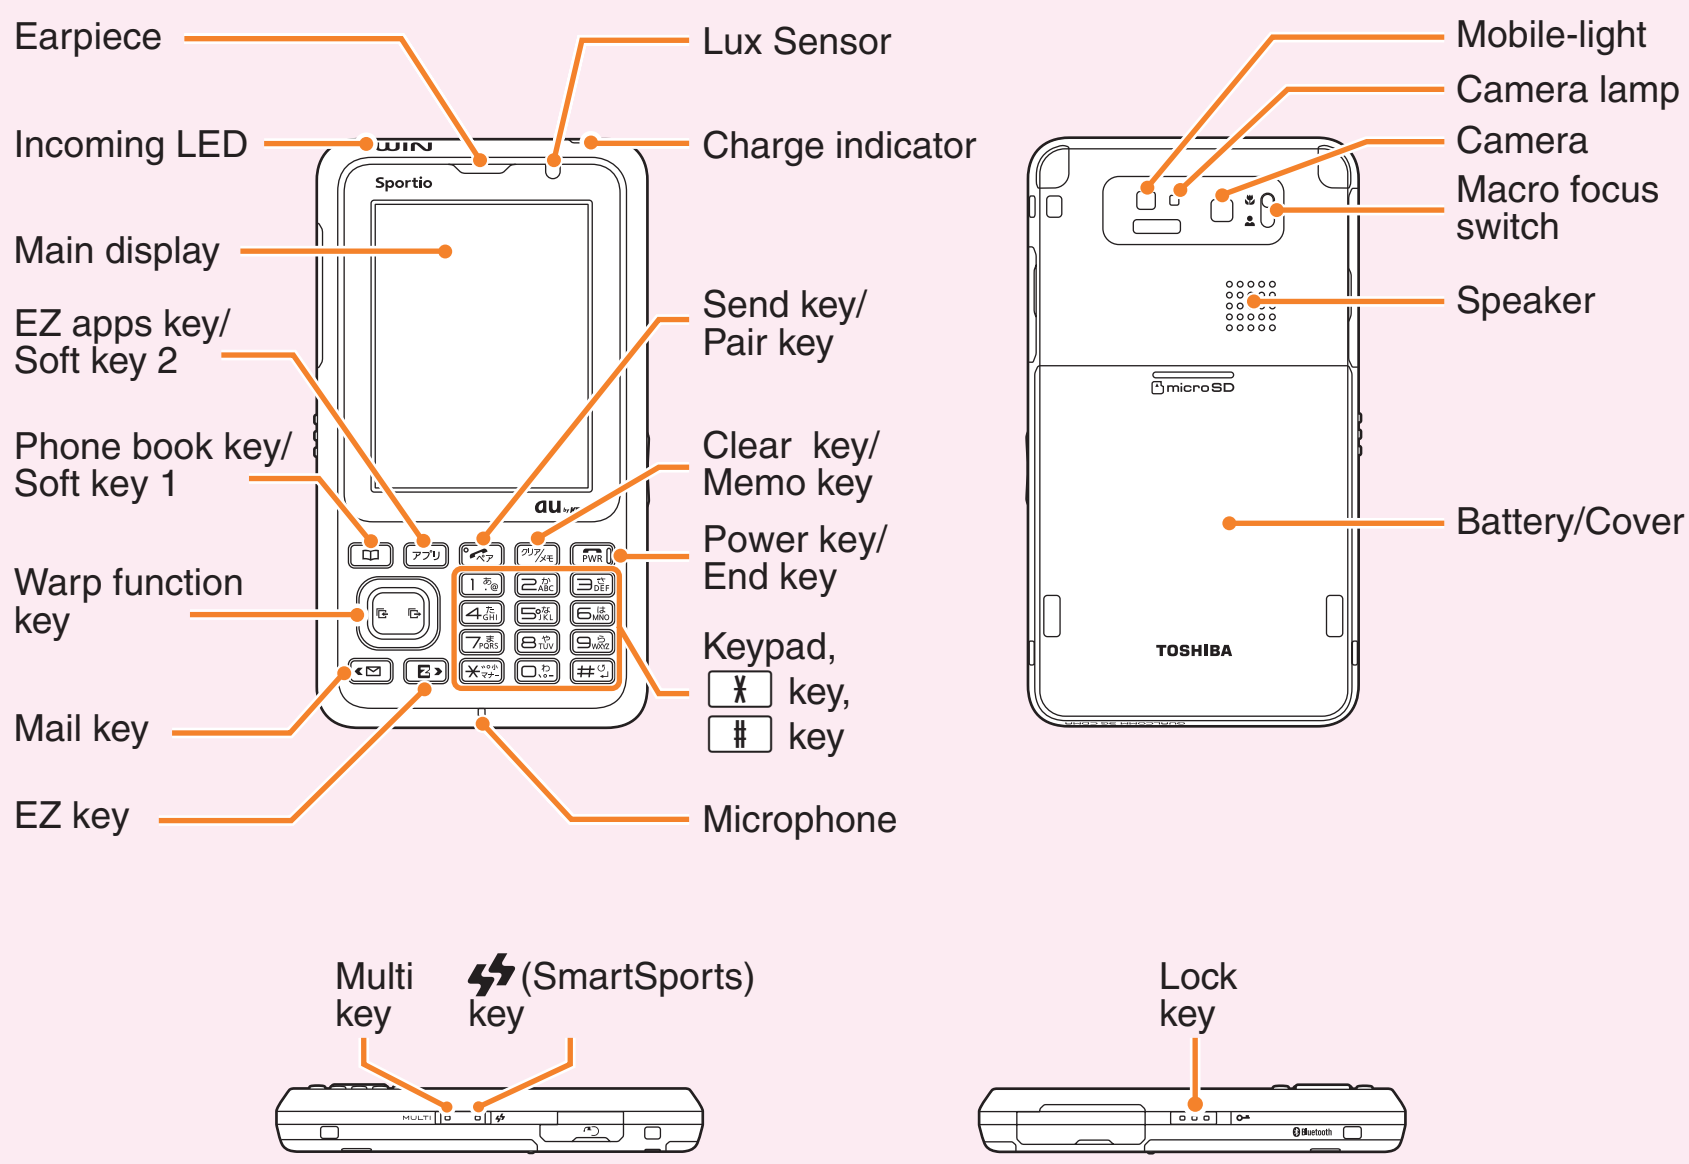

Turning the Power On and Off

●Turning the Power On

Press and hold [—] for more than one second.

●Turning the Power Off

From the stand-by screen: press and hold [—] for more than three seconds.

Checking Your Own Phone Number and E-mail Address

From the stand-by screen: press [●] ➧ press [▯].

Making/Answering a Call

●Making a Call

From the stand-by screen: enter the phone number ➧ press [/].

To end the call: press [—].

●Answering a Call

Press [/] while the phone is ringing.

To adjust the earpiece volume during a call: press [↕] ➧ press [●][OK].

Storing/Recalling an Entry in the Phone Book

●Storing an Entry

From the stand-by screen: press and hold [📖] for more than one second ➡ press [✥] to select the item ➡ press [■][選択](Select) to enter the data ➡ press [アプリ][登録](Add).

●Recalling an Entry

From the stand-by screen: press [📖] to display the Name Search screen ➡ press [✥] to select the name ➡ press [■][詳細](Detail) to display the entry's details screen.

Using the Camera (Movie Clips/Photos)

●Recording a Movie Clip

From the stand-by screen: press [■] ➡ press [✥] to select [カメラ](Camera) ➡ press [■] [選択](Select) ➡ press [3] ➡ press [■] [録画](Rec) to start recording ➡ press [■] [保存](Save) to save the movie.

To stop recording: press [■] [停止](Stop) during recording.

●Taking a Photo

From the stand-by screen: press [■] ➡ press [✥] to select [カメラ](Camera) ➡ press [■] [選択](Select) ➡ press [1] ➡ press [■] [撮影](Shot) to take a photo ➡ press [■] [保存](Save) to save the photo.

Making an International Call

Ex: To call 212-123-△△△△ in the USA

[0][0][5][3][4][5] ➡ [1] ➡ [2][1][2] ➡ [1][2][3] ➡ △△△△ ➡ Press [📞].

International access code — Country code (USA) — Area code — Phone number

English Announcement Function

You can play Voice Mail Service operation instructions and answering messages in English.

From the stand-by screen: press [■] ➡ press [5] ➡ press [3] ➡ press [6] ➡ press [📞].

Other Handy Features

●Setting the Manner Mode

From the stand-by screen: press and hold [＊] for more than one second.

To cancel Manner mode: press and hold [＊] for more than one second from the stand-by screen.

●Setting the Voice Memo

From the stand-by screen: press and hold [クリア/メモ] for more than one second.

To cancel the Voice Memo: press and hold [クリア/メモ] for more than one second from the stand-by screen.

For inquiries, please contact

au Customer Service Center (General Information)

●If you are calling from a landline phone: [FD] 0077-7-111 (toll free)

●If you are calling from an au mobile phone: 157 (toll free)